J & E Supply & Fastener Co., Inc.
jandesupply.com

1903 SE 59th St · Oklahoma City, Oklahoma 73129 · 405-670-1234
1001 S 12th St · Duncan, Oklahoma 73533 · 580-255-2582

TECH DATA


Insulated U-Bolt — 2″ pipe

Insulated · Steel · Hot-dip galvanized


THE PART

Part number	**UB0200/0375/045IHG**
Type	**Insulated U-bolt (round bend)**
Pipe size	**2″ pipe (2.375″ outside)**
Rod / thread	**3/8″-16 UNC (coarse)**
Inside width (A)	**2-7/16″**
Leg length (B)	**4-9/16″ (inside of bend to leg end)**
Leg C-C	**2-13/16″ (inside width + rod)**
Material	**Steel**
Finish	**Hot-dip galvanized**
Comes with	**Its pad and 4 nuts**

U-BOLT

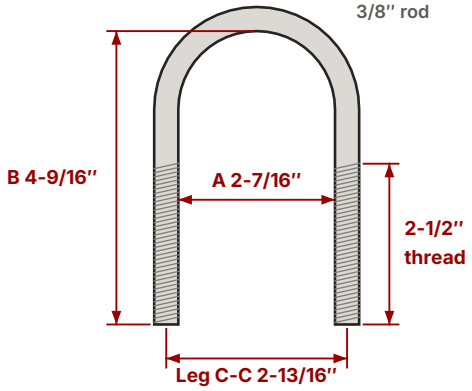

PAD THAT FITS · TOP VIEW

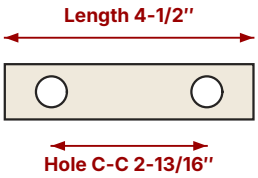

Hole C-C = this U-bolt's leg C-C, so the legs pass straight through. The pipe sits on the pad's rounded face.

Drawn to this part's proportions from its catalog sizes. Not for gauging.

PIPE SIZE

2″ pipe

Fits pipe 2.375″ outside diameter

Round-bend U-bolts are named by the pipe they wrap, not by what you measure.

THREAD

3/8″-16

Coarse (UNC)

2-1/2″ of thread on each leg

PAD THAT FITS

UB2DPAD

Comes with this U-bolt - sold alone as a spare

4-1/2″ long · 1″ wide · 7/16″ high

DIMENSIONS

A	Inside width	**2-7/16″ (inside diameter of the bend)**
B	Leg length	**4-9/16″ (inside of bend to leg end)**
C	Thread size	**3/8″-16 UNC**
	Rod diameter	**3/8″**
	Leg C-C	**2-13/16″ (inside width + rod)**
	Thread length	**2-1/2″ each leg**

Letters match How to measure. Thread length from the U-bolt & pad fit chart.

THE PAD · 2″ PIPE, 3/8″ ROD

Part number	**UB2DPAD**
Length	**4-1/2″**
Hole C-C	**2-13/16″ (= leg C-C)**
Width	**1″**
Height	**7/16″**
With this U-bolt	**Included, one per U-bolt**

Hole C-C matches the leg C-C, so the legs pass straight through. The pipe sits on the pad's rounded face.

Information only, summarized from the published standards and makers' data on our reference pages at jandesupply.com (11/13/2026). Standard values, not a test of this lot — the current edition of the governing standard governs. J & E Supply makes no warranty of suitability for any use; for critical work, confirm against the standard and the maker's certifications and test your application. J & E Supply is an independent distributor.

J & E Supply & Fastener Co., Inc.
jandesupply.com

1903 SE 59th St · Oklahoma City, Oklahoma 73129 · 405-670-1234
1001 S 12th St · Duncan, Oklahoma 73533 · 580-255-2582

TECH DATA

Insulated U-Bolt — 2″ pipe

Insulated · Steel · Hot-dip galvanized

HOW TO MEASURE

A Inside width — the gap between the two legs, measured on the inside. For a round bend this is the inside diameter; for a square bend it's the inside width of the opening.

B Leg length — measured from the inside of the bend to the end of the leg. This sets how deep it reaches and how much thread you have to work with.

C Thread size — the diameter and pitch of the threaded ends (for example ½–13). Measure it like any bolt, or see how to measure a fastener.

FIT CHART

Scan for every insulated U-bolt and pad size, side by side.

jandesupply.com · Resources

USE IT WITH

Ships with its pad and 4 nuts

Nuts are 3/8″-16 hex nuts. Nut wrench 9/16″. One pad per U-bolt; the pipe rests on it.

Information only, summarized from the published standards and makers' data on our reference pages at jandesupply.com (11/13/2026). Standard values, not a test of this lot — the current edition of the governing standard governs. J & E Supply makes no warranty of suitability for any use; for critical work, confirm against the standard and the maker's certifications and test your application. J & E Supply is an independent distributor.